

ZENIKO

日期: 2023/08/18

料号 705-MR1100-00

项目 MR11 说明书

成品尺寸 140*90 mm

公差 $\pm 0.5\text{mm}$

材质 105g 哑粉纸

工艺 骑马订

颜色要求 专色 + 黑色印刷 PANTONE 1235C

其他

包装结构 江叶群 产品 何黎君

设计师 阳文娟 文案 吴水宁

重要: PDF 文件仅供预览, 实际印刷请使用 AI 转曲文档
(或 Cdr 转曲文档)

 
刀模线 标示线刀模线
标示线 请勿印刷!

印刷要求:

色相正确, 印迹牢固, 套印准确, 各色套印不露杂色,
套印误差 $\leq 1\text{mm}$, 模切走位 $\pm 1\text{mm}$

合格证
QC PASS

ZENIKO

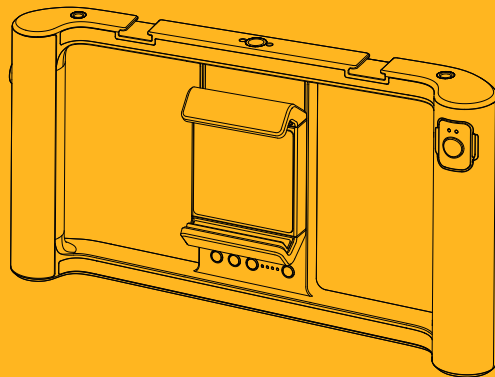

深圳卓立久科技有限公司

地址：深圳市罗湖区桂园街道新围社区深南东路5033号金山大厦1208
电话：0755-25106331

Zeniko Technology Co., LTD

Add.: 1208 Room, Jinshan Building, No.5033, Shennan East Road, Xinwei
Community, Guiyuan Street, Luohu District, Shenzhen City
Tel: +86-755-25106331

www.zeniko.com

Made in China | 705-MR1100-00



MR11

手机摄影兔笼

Smartphone Video Rig

前言

 
 
 
感谢您购买 ZENIKO 产品。

ZENIKO 全新推出一款手机摄影免笼 MR11，有了它，您可以轻松将智能手机变成便携式手持拍摄设备。免笼具备 6 个 1/4"螺丝口、1 个 3/8"螺丝孔 + 阿莱定位孔、2 个冷靴槽，大大提高了免笼拓展性；自带 LED 补光灯，支持五档色温调节 / 五档亮度调节；拥有可拆卸蓝牙遥控器，支持远程控制手机拍摄或录制；属于移动充电设备，可为手机提供有线充电 / 无线充电；可夹持宽度为 57mm-95mm 手机；常适用于手机摄像、直播、Vlog 录制、微电影制作等拍摄场景。


警告

- ▲ 专业摄影设备，禁止儿童使用。当儿童靠近时，家长或监护人必须密切监督，以免儿童因碰撞灯具或私用免笼造成人身伤害。
- ▲ 倘灯珠损坏或因热变形，应停止使用并及时联系制造商、服务代理商或合格的维修人员更换灯珠，以免发生意外。
- ▲ 设备需安装在干燥且通风处，避免在雨天、潮湿、多尘或过热环境下使用。
- ▲ 对于不规范操作引起的机器故障不在保修范围内。

部件名称

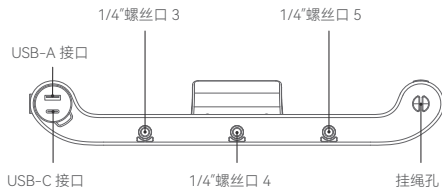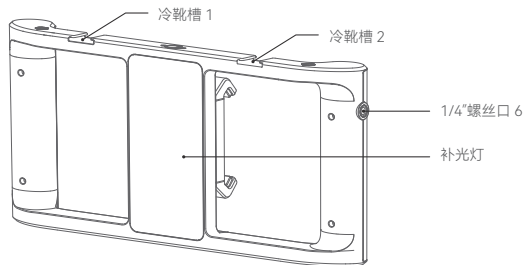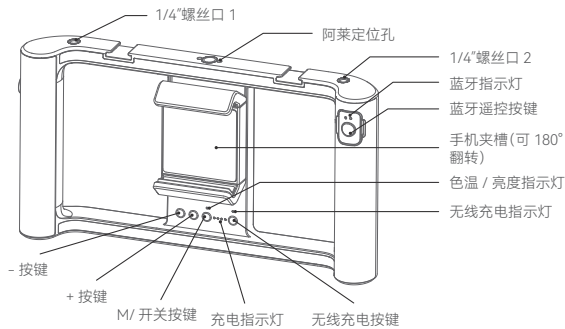

物料清单

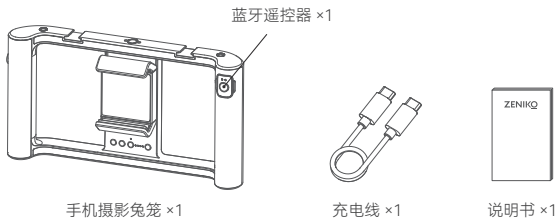 


指示灯说明

蓝牙指示灯

长按 2S 蓝牙遥控按键开机, 蓝灯亮起代表蓝牙开启。开机状态下长按 2s 蓝牙遥控器关机, 指示灯熄灭代表蓝牙关闭。

 充电时, 红色常亮代表正常充电, 指示灯熄灭又代表蓝牙遥控器满电, 开机工作时, 红灯出现快闪代表遥控器电量在 15% 及以下。

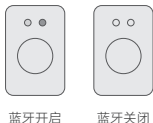

充电指示灯



一颗电量指示灯亮起, 代表电量为 0%-25%, 请及时充电。



两颗电量指示灯亮起, 代表电量为 25%-50%。



三颗电量指示灯亮起, 代表电量为 50%-75%。



四颗电量指示灯亮起, 代表电量为 75%-100%。

色温 / 亮度指示灯

短按 <M/☉> 开关按键, 白灯亮起代表开启亮度调节模式, 橙灯亮起代表开启色温调节模式。



无线充电指示灯

长按 <☑> 按键 1 秒, 白灯亮起代表无线充电模式开启, 此时可放入手机, 进行无线充电, 开启后短按无线充电按键, 指示灯熄灭代表无线充电模式关闭。如果补光灯已经处于开机模式下, 只需短按无线充电按键即可开启无线充电。



开机/关机

长按 <M/☉> 按键 1.5S 进行开机 / 关机, 开灯时色温 / 亮度指示灯呈亮灯状态。



色温调节

开机后, 短按 <M/☉> 按键可切换色温调节模式 / 亮度调节模式, 切换至色温调节模式时, 色温 / 亮度指示灯为橙灯。短按 <-> 按键或 <+> 按键切换色温, 一共五档色温: 2800K、3200K、4300K、5600K、6500K。

亮度调节

 
开机后, 短按 <M/☉> 按键可切换色温调节模式 / 亮度调节模式, 切换至亮度调节模式时, 色温 / 亮度指示灯为白灯。短按 <-> 按键或 <+> 按键切换亮度, 一共五档亮度。

无线充电/有线充电


手机摄影兔笼 MR11 属于移动充电设备,能够支持手机无线充电或有线充电。

无线充电: 长按无线充电按键直至无线充电指示灯亮起,此时将手机放入手机夹中便可以进行无线充电。

注:不同品牌的手机,无线充电位置会有所变化,用户需自行调整位置。

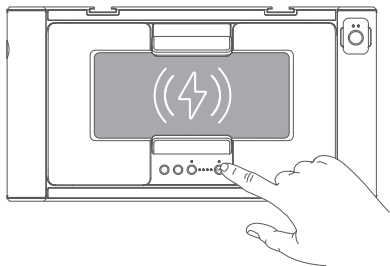

 有线充电: 兔笼开机后,使用 USB-A 充电线连接 USB-A 接口即可进行有线充电。

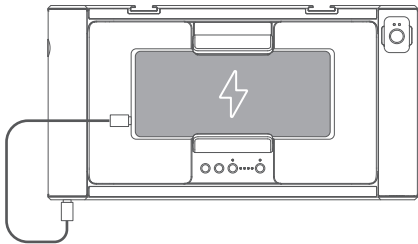

注:开启无线充电模式但是不放入手机进行无线充电,此时依然可以进行有线充电。

蓝牙操控

长按蓝牙遥控按键直至指示灯亮起蓝光,代表此时蓝牙已开启。使用手机连接蓝牙“ZENIKO-MR11”,便可使用蓝牙遥控器远程控制拍摄或视频录制。

再次长按蓝牙遥控按键直至指示灯熄灭,代表此时蓝牙已关闭。

规格参数

型号	MR11
供电	5V - 2A
输出电压电流	无线: 5V = 1A(Max) 有线: 5V = 1A(Max)
锂电池	7.4V 3200mAh 23.68Wh
充电时间(兔笼)	≈2 小时 20 分钟
续航时间(兔笼开启 LED 灯)	≈3 小时 50 分钟
充电时间(蓝牙遥控器)	≈1 小时
续航时间(蓝牙遥控器)	≈4 天 10 小时
色温	5 档色温: 2800K、3200K、4300K、5600K、6500K
亮度	5 档亮度
Ra	≥96
TLCI	≥99
照度数据(灯体处于亮度 100%, 色温为 5600K)	≈1720lux/160fc(0.98ft/0.3m) ≈600lux/56fc(1.64ft/0.5m) ≈158lux/15fc(3.28ft/1m)
工作环境温度	-10°C~+50°C
尺寸	272mm*142mm*37mm
净重 ≈	438g

* 规格参数如有变更,恕不另行通知。

FOREWORD

 
 
 
Thank you for purchasing!

This smartphone video rig MR11 can turn your smartphone into portable and handheld shooting device with the following characteristics. Its six 1/4" screw ports, one 3/8" screw port & Arri positioning hole and two coldshoe slots greatly improve the expandability. The attached LED light provides five levels of CCT adjustment and brightness adjustment. Detachable Bluetooth remote control supports shooting and recording from far distance. Besides, it can also charge the smartphone wirelessly or with a charging cable. With a clampable width of 57mm to 95mm, MR11 is suitable for smartphone photography, live streaming, vlogging, microfilm production and etc.


⚠ WARNING

- ▲ Keep out of reach of children. Close supervision is necessary when any appliance is used by or near children. Do not leave appliance unattended while in use.
- ▲ If the light beads are damaged or deformed by heat, stop using and contact the manufacturer, service agent or qualified maintenance in time to replace.
- ▲ This appliance is not waterproof device. Keep it dry, do not immerse this appliance in water or other liquids. Do not use this appliance in rainy, humid, dusty in overheated environments.
- ▲ Unauthorized service will void the warranty.
- ▲ Changes made to the specifications or designs may not be reflected in this manual.

NAME OF PARTS

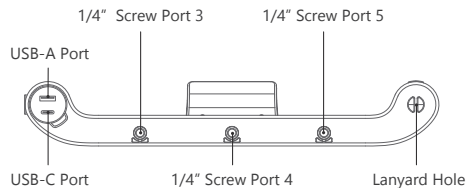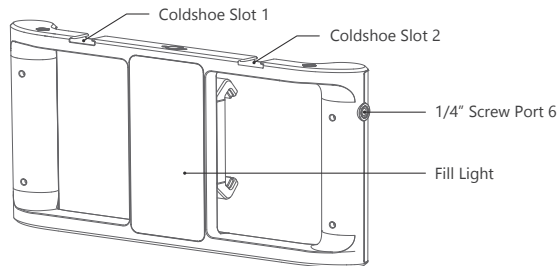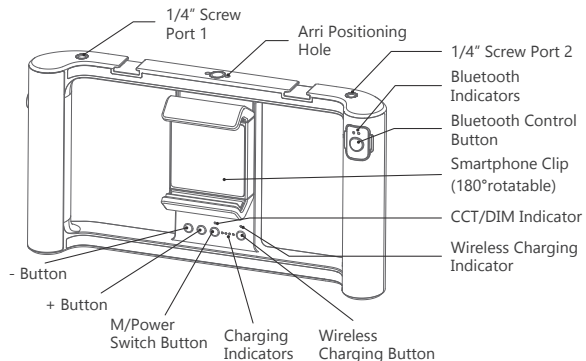


WHAT'S INSIDE

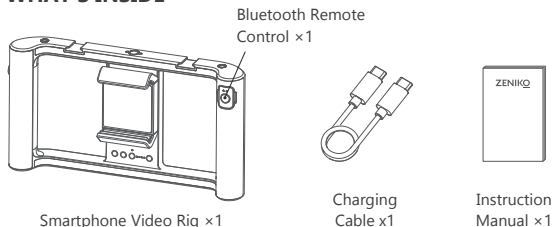 

INSTRUCTIONS FOR INDICATORS

Bluetooth Indicators

 Long press the Bluetooth control button for 2s to turn it on, the Bluetooth indicators are constant on blue means the Bluetooth is turned on. Press it for 2s in power on status to turn it off, the indicators are off means the Bluetooth is turned off.

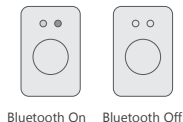

When charging, the Bluetooth indicators are constant on red means normal charging, off means the Bluetooth remote control is fully charged, while flashes red rapidly in power on status means the remote control battery power is 15% and below.

Charging Indicators



One charging indicator lights up means the battery level is 0% to 25%, please charge in time.



Two charging indicators light up means the battery level is 25% to 50%.



Three charging indicators light up means the battery level is 50% to 75%.



Four charging indicators light up means the battery level is 75% to 100%.

CCT/DIM Indicator

Press the <M/⏻> button, the CCT/DIM indicator constant on white means DIM adjusting mode, the CCT/DIM indicator constant on orange means CCT adjusting mode.



Wireless Charging Indicator

Press and hold the <⚡> button for 1s, the wireless charging indicator constant on white means wireless charging mode is on, then users can wirelessly charge the smartphones by clipping it properly. Press the wireless charging button in power on status, the wireless charging indicator off means the wireless charging mode is turned off. If the light is already turned on, press the wireless charging button can turn on wireless charging mode.



POWER SWITCH

Press and hold the <M/⏻> button for 1.5s to turn on or off the device, the CCT/DIM indicator will light up in power on status.



CCT ADJUSTMENT

Press the <M/⏻> button in power on status can switch CCT/DIM adjusting mode, the CCT/DIM indicator will be constant on orange in CCT adjusting mode. Press the <-> button or <+> button to adjust CCT among: 2800K, 3200K, 4300K, 5600K and 6500K.

DIM ADJUSTMENT

 
Press the < M / ☺ > button in power on status can switch CCT/DIM adjusting mode, the CCT/DIM indicator will be constant on white in DIM adjusting mode. Press the - button or + button to adjust DIM among five levels.

WIRELESS CHARGING/WIRED CHARGING


MR11 can charge the smartphone wirelessly or with a charging cable.

Wireless Charging: Press and hold the wireless charging button, the wireless charging indicator constant on white means wireless charging mode is on, then users can wirelessly charge the smartphones by clipping it properly.

Note: The wireless charging parts may vary in different phone brands, users need to adjust the contact positions accordingly.

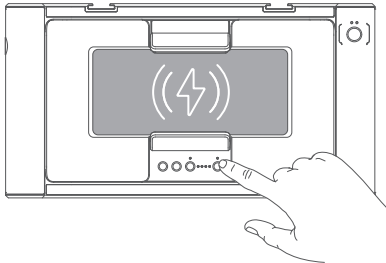

 Wired Charging: Turn on the device, connect the smartphone to the USB-A port with the USB-A charging cable to charge it.

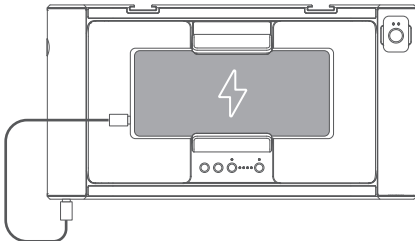

Note: Turn on the wireless charging mode but do not clip the smartphone onto the rig for wireless charging, it can still be wired charged.

BLUETOOTH CONTROL

Press and hold the Bluetooth control button until the indicator is constant on blue, then the Bluetooth is turned on. Connect to the device "ZENIKO-MR11" via smartphone Bluetooth, then users can control the smartphone to shoot and record from far distance.

Press and hold the Bluetooth control button, the indicators off means the Bluetooth is turned off.

TECHNICAL DATA

Model	MR11
Power Supply	5V $\overleftrightarrow{=}$ 2A
Output Parameters	Wireless: 5V $\overleftrightarrow{=}$ 1A(Max.) Wired: 5V $\overleftrightarrow{=}$ 1A(Max.)
Lithium Battery	7.4V 3200mAh 23.68Wh
Charging Time (smartphone rig)	\approx 2h 20min
Battery Life (smartphone rig with LED light on)	\approx 3h 50min
Charging Time (Bluetooth remote control)	\approx 1h
Battery Life (Bluetooth remote control)	\approx 4d 10h
CCT	2800K, 3200K, 4300K, 5600K, 6500K
DIM	Five levels
Ra	\geq 96
TLCTI	\geq 99
Illuminance Data (brightness 100%, CCT 5600K)	\approx 1720lux/160fc (0.98ft/0.3m) \approx 600lux/56fc (1.64ft/0.5m) \approx 158lux/15fc (3.28ft/1m)
Work Environment Temperature	-10°C ~ +50°C
Dimension	10.7" * 5.6" * 1.5"
Net Weight \approx	438g

Specifications and data may subject to changes without notice.

FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

WARNING

Operating frequency:2402MHz – 2480MHz(BT)

Maximum EIRP Power: 5dBm

DECLARATION OF CONFORMITY

Zeniko Technology Co., LTD hereby declares that this equipment are in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. In accordance with Article 10(2) and Article 10(10), this product is allowed to be used in all EU member states.For more information of DoC, Please click this web link:<http://www.zeniko.com/EU/MR11.PDF>. The device complies with RF specifications when the device used at 0mm from your body.

产品保修

尊敬的用户，本保修卡是申请保修服务的重要凭证，请您配合销售商填写并妥善保管，谢谢！

产品信息	型号	产品条码
用户信息	姓名	联系电话
	通信地址	
销售商信息	名称	
	联系电话	
	通信地址	
	销售日期	
备注		

注：此表应由销售商盖章确认。

适用产品

本文件适用于相关《产品保修信息》(见后面说明)所列产品，其他非属此范围的产品或部件(如促销品、赠品及其他出厂后附加的部件等)不在此保修承诺内。

保修期

产品及部件的相应保修期按相关的《产品保修信息》执行。保修期自产品首次购买日起算,购买日以购买产品时保修卡登记日期为准。

如何获得维修服务

您可直接与产品销售商或授权服务机构联系。申请保修时，您应提供有效的保修卡作为保修凭证，方可获得保修。如您不能提供有效的保修卡，则在我们确认产品或部件属于保修范围的情况下，也可以为您提供保修，但这不作为我们的义务。

不适用保修的情况

如产品存在下列情况，本文件项下的保证和服务将不适用 ①产品或部件超过相应保修期；②错误或不当使用、维护或保管导致的故障或损坏，如：不当搬运；非按产品合理预期用途使用；不当插拨外接设备；跌落或外力挤压；接触或暴露于不当温度、溶剂、酸碱、水浸或潮湿环境；③由非卓立久授权机构或人员安装、修理、更改、添加或拆卸造成的故障或损坏；④产品或部件原有识别信息被修改变更或删除；⑤无有效保修卡；⑥使用非法授权、非标准或非公开发行的软件造成的故障或损坏；⑦因不可抗力或意外事件造成的故障或损坏；⑧其他非因产品本身质量问题导致的故障或损坏。遇上述情况，您应向相关责任方寻求解决，卓立久对此不承担任何责任。因非在保修期或保修范围内的部件、附件或软件导致产品不能正常使用的，不是保修范围内的故障。产品使用过程中正常的脱色、磨损和消耗，不是保修范围内的故障。

产品保修和服务支持信息

产品的保修期和服务类型按以下《产品保修信息》执行：

产品类别	选件名称	保修期(月)	保修服务类型
部件	电路板	12	客户送修
	电池	3	客户送修
	充电器等带电性能的部件	12	客户送修
其他	如外壳、保护罩、锁紧装置、包装等。	无	无保修

卓立久产品售后服务电话：0755-25106331

WARRANTY

Dear customers, as this warranty card is an important certificate to apply for our maintenance service, please fill in the following form in coordination with the seller and safe-keep it. Thank you!

Product Information	Model	Product Code Number
Customer Information	Name	Contact Number
	Address	
Seller Information	Name	
	Contact Number	
	Address	
	Date of Sale	
Note:		

Note: This form shall be sealed by the seller.

Applicable Products

The document applies to the products listed on the Product Maintenance Information (see below for further information). Other products or accessories (e.g. promotional items, giveaways and additional accessories attached, etc.) are not included in this warranty scope.

Warranty Period

The warranty period of products and accessories is implemented according to the relevant Product Maintenance Information. The warranty period is calculated from the day(purchase date) when the product is bought for the first time, And the purchase date is considered as the date registered on the warranty card when buying the product.

How to Get the Maintenance Service

If maintenance service is needed, you can directly contact the product distributor or authorized service institutions. You can also contact the Zeniko after-sale service call and we will offer you service. When applying for maintenance service, you should provide valid warranty card. If you cannot provide valid warranty card, we may offer you maintenance service once confirmed that the product or accessory is involved in the maintenance scope, but that shall not be considered as our obligation.

Inapplicable Cases

The guarantee and service offered by this document are not applicable in the following cases: ①. The product or accessory has expired its warranty period; ②. Breakage or damage caused by inappropriate usage, maintenance or preservation, such as improper packing, improper usage, improper plugging in/out external equipment, falling off or squeezing by external force, contacting or exposing to the improper temperature, solvent, acid, base, flooding and damp environments, etc; ③. Breakage or damage caused by non-authorized institution or staff in the process of installation, maintenance, alternation, addition and detachment; ④. The original identifying information of product or accessory is modified, alternated, or removed; ⑤. No valid warranty card; ⑥. Breakage or damage caused by using illegally authorized, nonstandard or non-public released software; ⑦. Breakage or damage caused by force majeure or accident; ⑧. Breakage or damage that could not be attributed to the product itself. Once met these situations above, you should seek solutions from the related responsible parties and Zeniko assumes no responsibility. The damage caused by parts, accessories and software that beyond the warranty period or scope is not included in our maintenance scope. The normal discoloration, abrasion and consumption are not the breakage within the maintenance scope.

MAINTENANCE AND SERVICE SUPPORT INFORMATION

The warranty period and service types of products are implemented according to the following Product Maintenance Information:

Product Type	Name	Maintenance Period(month)	Warranty Service Type
Parts	Circuit Board	12	Customer sends the product to designated site
	Battery	3	Customer sends the product to designated site
	Electrical parts e.g.battery charger, etc.	12	Customer sends the product to designated site
Other Items	Flash tube, modeling lamp, lamp body, lamp cover, locking device, package, etc.	NO	Without warranty

Zeniko After-sale Service Call: +86-755-25106331